



BRUKSANVISNING / INSTRUCTION MANUAL

MINIVIFTE / MINI FAN / 80001447



INNLEDNING

Takk for at du valgte et produkt fra Epiq. Du har anskaffet et kvalitetsprodukt som oppfyller alle gjeldende ytelses- og sikkerhetsstandarder i EU. For å sikre ordentlig håndtering og forlenge produktets liv, anbefaler vi at du følger instruksjonene nedenfor.

Les bruksanvisningen og spesielt sikkerhetsinstruksjonene nøye før du bruker enheten. Ta vare på denne bruksanvisningen og ha den tilgjengelig sammen med produktet når andre bruker det.

GENERELLE SIKKERHETSINSTRUKSER

- Feil bruk av produktet kan forårsake personskade og skade.
- Bruk kun produktet til sin tiltenkte bruk. Produsenten er ikke ansvarlig for skader som følger av feil bruk eller håndtering.
- Plasser alltid produktet på en tørr, flatt og stabil overflate, unna bordkanter eller lignende.
- Produktet er kun beregnet for husholdningsbruk. Produktet er ikke for profesjonell bruk.
- Produktet kan kun tilkobles 100-240V~, 50/60Hz.
- Produktmotoren/-elektronikken, ledningen eller støpselet kan ikke senkes i vann. Vann kan ikke komme i kontakt med motoren/elektronikken.
- Berør aldri produktet, ledningen eller støpselet med våte eller fuktige hender.
- Ikke utsett produktet for direkte sollys, høye temperaturer, luftfuktighet, støv eller etsende stoffer.
- Forlat aldri produktet etter at det er slått på.
- Produktet må holdes under konstant oppsyn når det er i bruk. Barn må alltid ha tilsyn når du bruker produktet, for å sørge for at de ikke leker med det. Produktet er ikke en leke.
- Produktet kan ha skarpe deler og må derfor holdes unna rekkevidden til barn.

- Benytt kun tilbehøret som leveres med produktet eller som anbefales av produsenten.
- Produktet skal ikke brukes av personer med redusert følsomhet, fysiske- eller mentale evner, eller av mennesker som ikke er i stand til å betjene produktet med mindre de er under tilsyn eller veiledning av en person ansvarlig for deres sikkerhet.

LEDNING OG STØPSEL

- Ikke la ledningen henge over kanten.
- Hold ledningen og produktet unna varmekilder, varme objekter og åpen ild.
- Koble fra strømledningen før rengjøring og dersom apparatet ikke er i bruk. Ikke dra i ledningen når den fjernes fra kontakten, ta heller i selve støpselet.
- Sørg for at ledningen er trukket helt ut.
- Kontroller jevnlig at ledningen og kontakten ikke er skadet, og ikke bruk produktet dersom dette er tilfelle, eller dersom det har falt i gulvet, falt i vann eller er skadet på annen måte.
- Produktet må inspiseres dersom produktet eller støpselet er skadet, og hvis nødvendig repareres av en autorisert reparatør. Forsøk aldri å reparere produktet selv. Kontakt butikken for å undersøke om reparasjonen dekkes av garantien. Inngrep i produktet ugyldiggjør garantien.

KLAGERETT, GARANTIEN DEKKER IKKE:

- Dersom ovennevnte ikke er observert.
- Dersom produktet har blitt utsatt for uautorisert inngrep.
- Dersom enheten har blitt brukt feil, utsatt for tøff behandling eller annen form for skade.


AVHENDING AV PRODUKTET

Brukte produkter må ikke avhendes i husholdningsavfallet. I henhold til lovgivningen, skal produktet avhendes ordentlig slik at materialene kan resirkuleres på en miljøvennlig måte. Ytterligere informasjon er tilgjengelig fra den ansvarlige lokale myndigheten

eller det lokale avfallsselskapet. Produktet er utstyrt med følgende logo:



PRODUKT BESKRIVELSE

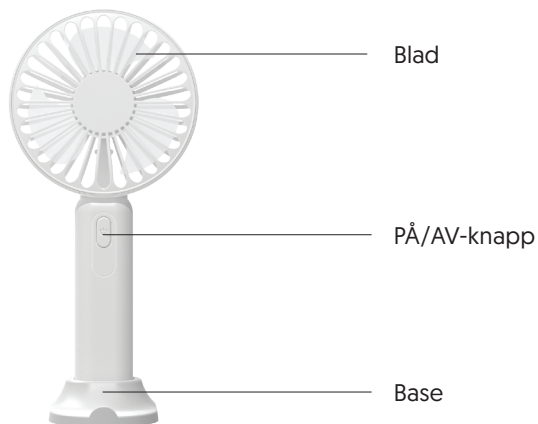

SLIK BRUKES DEN

1. Koble til USB-kabelen for å starte ladeprosessen. Ladingen starter og slutter automatisk. Det røde lyset blinker under lading og lyser når det er fulladet. Det blå lyset indikerer at det er operativt.
2. Ved første gangs bruk av miniviften, må du sørge for å lade batteriet helt.

ADVARSEL:

- Bruk kun en passende ladeenhet eller USB-tilkobling for å lade produktet.
- Ikke bruk defekte ladere eller USB-porter.
- Ikke overlad produktet eller la batteriet bli helt utladet.
- Lade regelmessig (minst kvartalsvis) ved langtidslagring.
- Trykk på «PÅ/AV»-knappen én gang for å aktivere miniviften ved førstehastighetsinnstilling.
- Trykk på knappen igjen for å bytte til den andre, høyere hastighetsinnstillingen.
- Trykk på knappen en gang til for å bytte til den tredje høyeste hastighetsinnstillingen.
- For å slå av miniviften, trykker du på knappen igjen.

ETTER BRUK

Slå av miniviften etter hver bruk.

RENGJØRING

1. Rengjør produktet forsiktig med en løfri klut og unngå bruk av sterke rengjøringsmidler.
2. Sørg for at det ikke kommer vann inn i produktet.

TEKNISKE DATA

Artikelnr. 80001447

Inngang: DC 5 V, 1 A

Batteri: 400 mAh Lithium-ion batteri

PRODUSENT

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th

8660 Skanderborg, Danmark

www.epiq.dk

Vi kan ikke holdes ansvarlige for eventuelle trykkfeil.

INTRODUCTION

Thank you for choosing a product from Epiq. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.


PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of

properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



PRODUCT DESCRIPTION

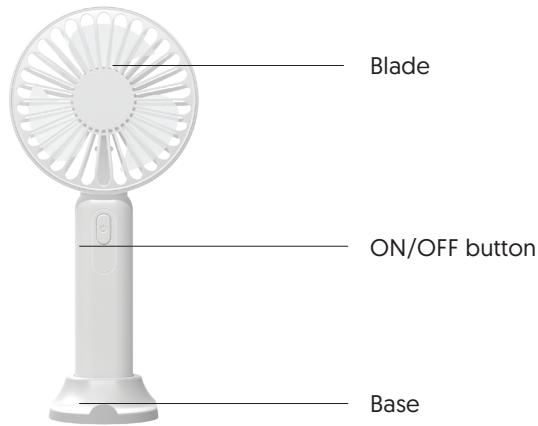

HOW TO USE

1. Connect the USB cable to begin the charging process. Charging starts and ends automatically. The red light flashes during charging and stays on when fully charged. The blue light indicates that it's operational.
2. For the first use of the mini fan, ensure that you fully charge the battery.

WARNING:

- Only use a suitable charging device or USB connection to charge the product.
- Do not use defective chargers or USB ports.
- Do not overcharge the product or allow the battery to be fully discharged.
- Charge regularly (at least quarterly) during long-term storage.
- Press the "ON/OFF" button once to activate the mini fan at the first-speed setting.
- Press the button again to switch to the second, higher speed setting.
- Press the button once more to switch to the third, highest speed setting.
- To turn the mini fan off, press the button again.

AFTER USE

After each use, turn the mini fan OFF.

CLEANING

1. Clean the product gently with a lint-free cloth and avoid using aggressive cleaning agents.
2. Ensure that no water can enter the product.

TECHNICAL DATA

Article No. 80001447

Input: DC 5V, 1A

Battery: 400mAh Lithium-ion
battery

PRODUCER

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark

www.epiq.dk

We cannot be held responsible for any printing
errors.